




10' x 10' Sandbox

With Fitted Cover, Ground Barrier, 4- Corner Seats & 1- Bench Seat

Model: CSG-120120

Step 1

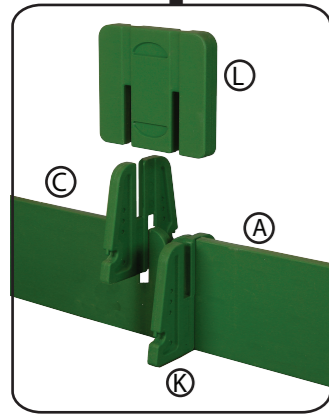


Using the parts indicated from list above, interlock panels as shown. It is important to choose a level flat area so that panels sit tight to ground. Cutting grass low and removing any high spots is recommended. Once frame has been assembled begin staking sandbox

panels to ground making sure that the 4 holes in each panel used. It is also important to hold panels inward slightly when setting stakes.


Important!

Before setting stakes into panels it is important to pull the panels inward slightly so that the out ward pressure form the sand will set the panel to a straight position.

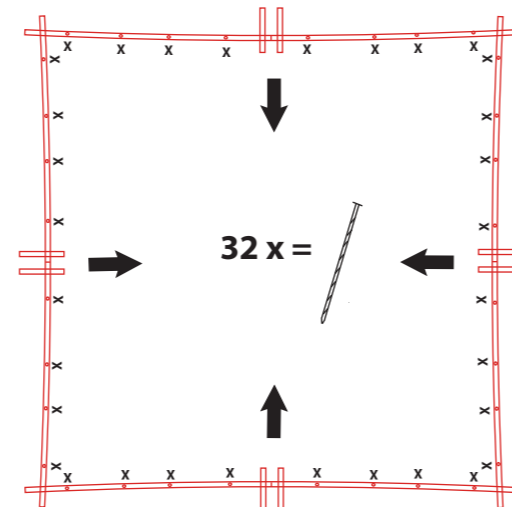

Stake Location Diagram

Step 2

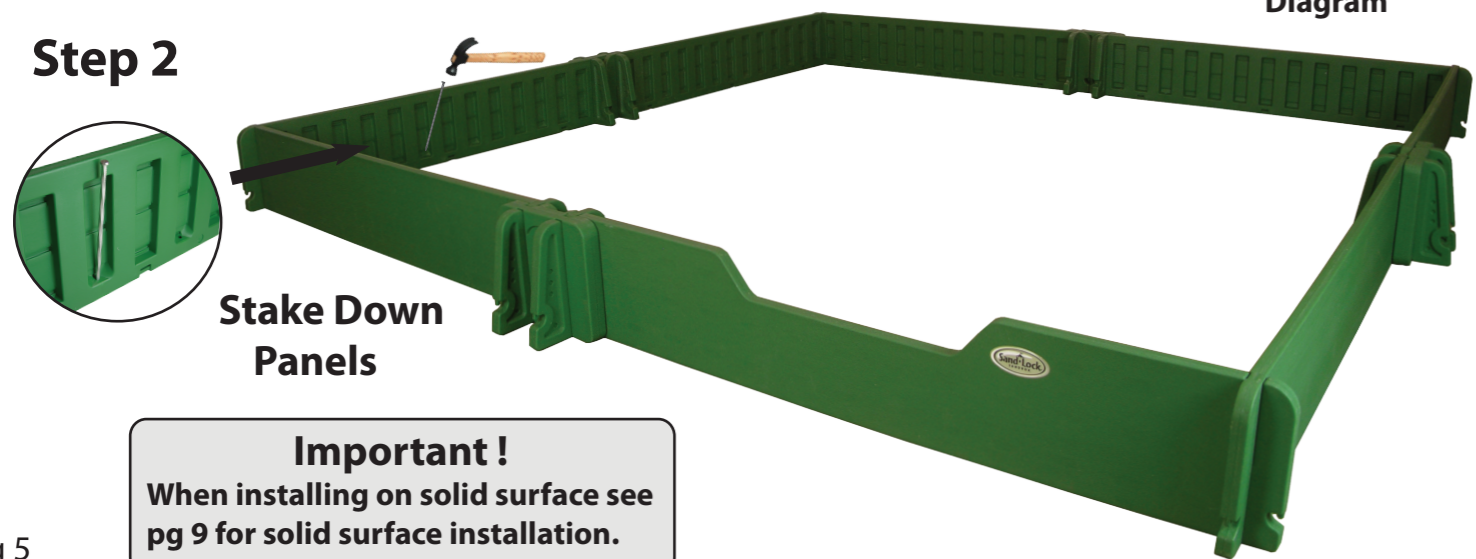

Stake Down Panels

Important!

When installing on solid surface see pg 9 for solid surface installation.


Your SandLock Sandbox kit includes:

- (A) Front Panel 1x
- (B) Side Panel 4x
- (C) Back Panel 1x
- (D) Seat Top 4x
- (E) Seat Support 12x
- (K) Support Panel 8x
- (L) Coupler Locking Panel 4x
- (J) 1x Bench seat Top
- (H) 32x Stakes
- (I) Ground Barrier
- (G) Fitted Cover


With sandbox frame complete , place liner into bottom of sandbox and unfold and adjust to the full interior of sandbox. Placing a small amount of sand on corners on the liner to allowing you to pull the Liner tight in all direction . Once the liner is stretched out completely the rest of sand can be placed and spread out evenly.

To complete assembly refer to Pg 7 for seat assembly instructions

Step 3

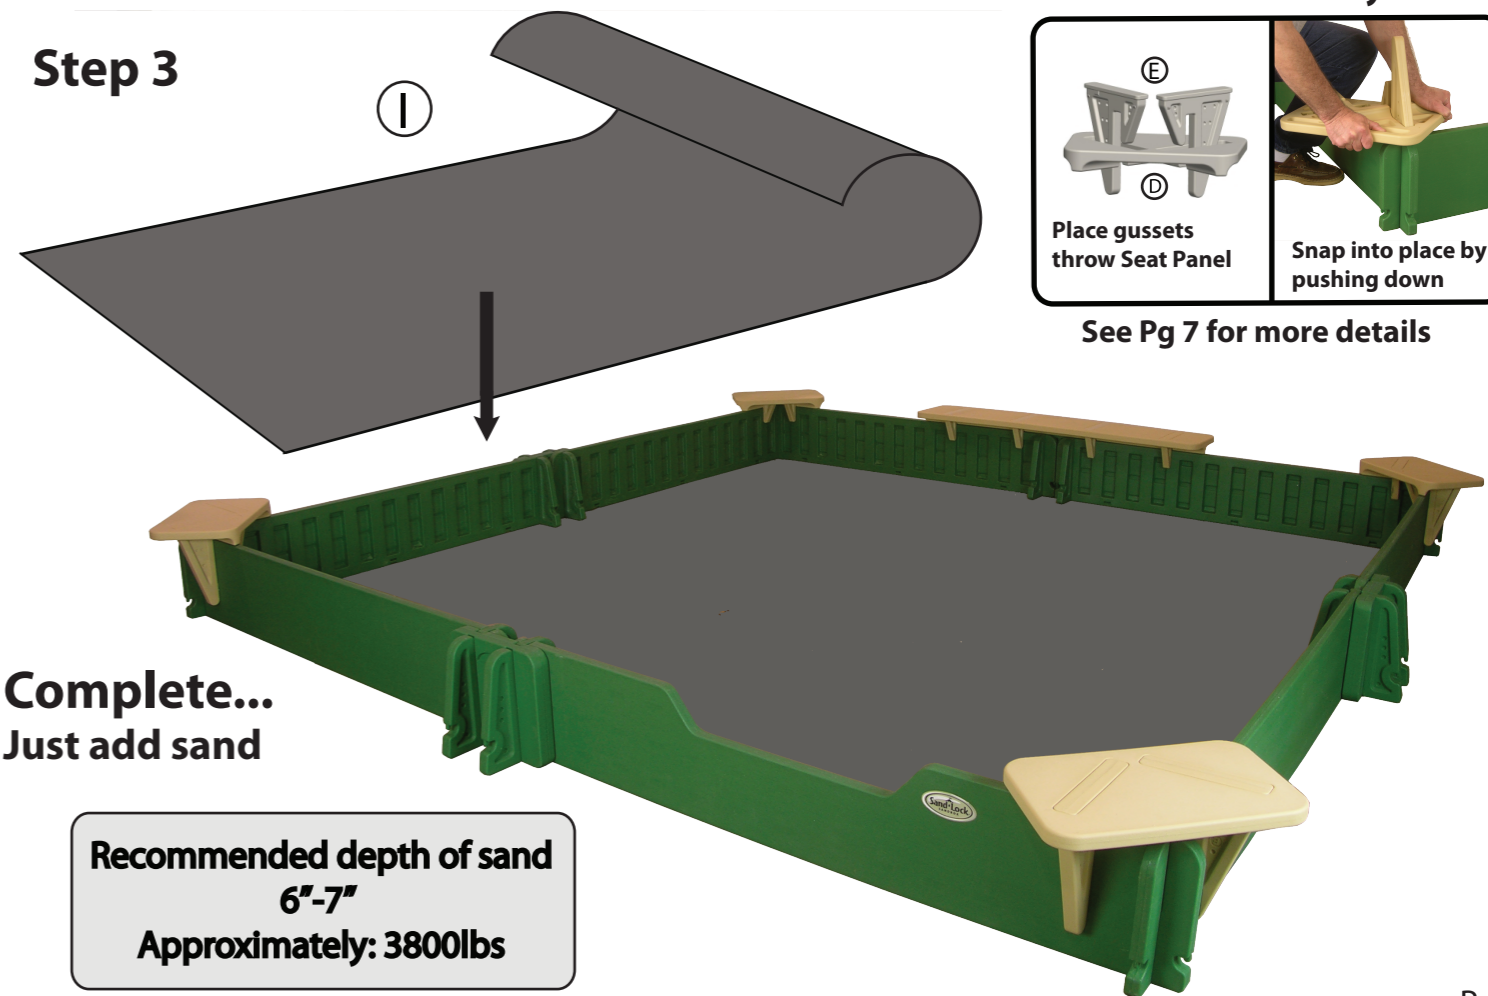

Seat Assembly

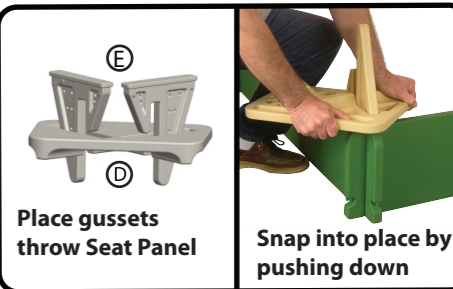

Place gussets throw Seat Panel

Snap into place by pushing down

See Pg 7 for more details

Complete...
Just add sand

Recommended depth of sand
6"-7"
Approximately: 3800lbs