




# 5' x 10' Sandbox


With Fitted Cover, Ground Barrier  
& 4 - Corner Seats

Model: CSG-60120

## Step 1

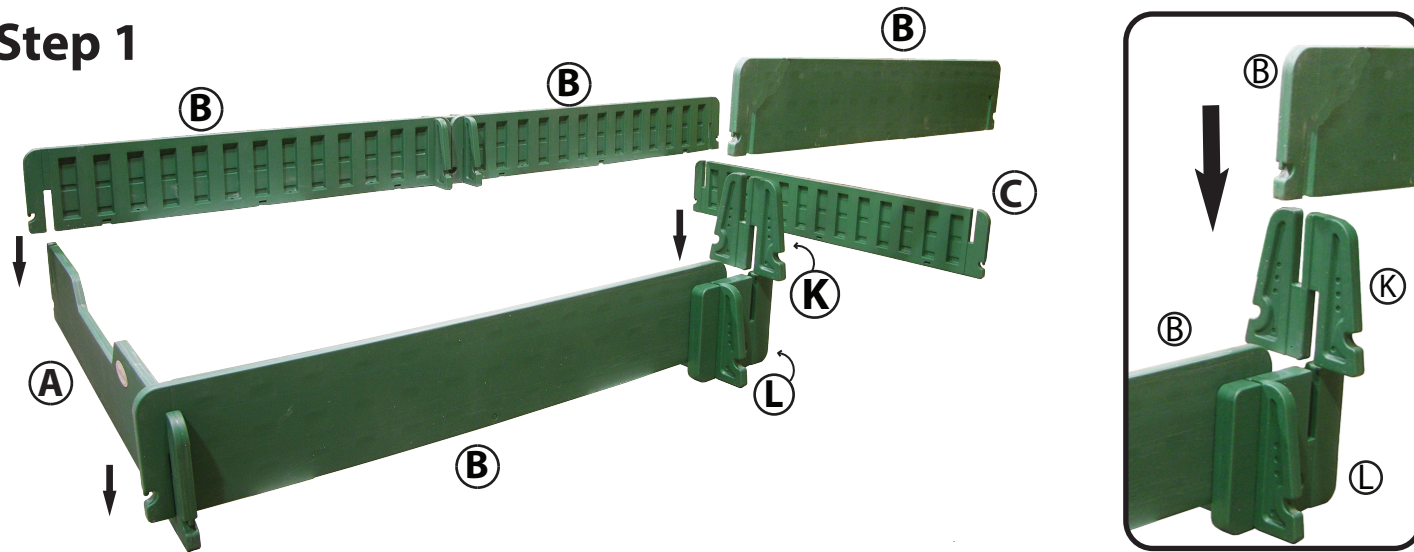


Using the parts indicated from list above, start by interlock panels as shown in diagram. It is important to choose a level flat area so that panels sit tight to ground. Cutting grass low and removing any high spots is recommend. **See pg 9 if installing on a Solid Surface.** With Sandbox frame assembled and corners in a square position, begin staking sandbox panels to the ground. Refer to stake diagram that indicates which hole to use in each panel. It is also important to hold panels inward slightly when setting stakes.

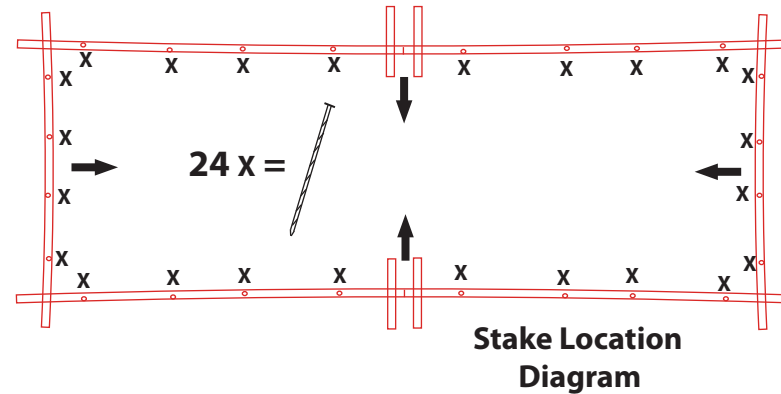

## Step 2

### Stake Down Panels

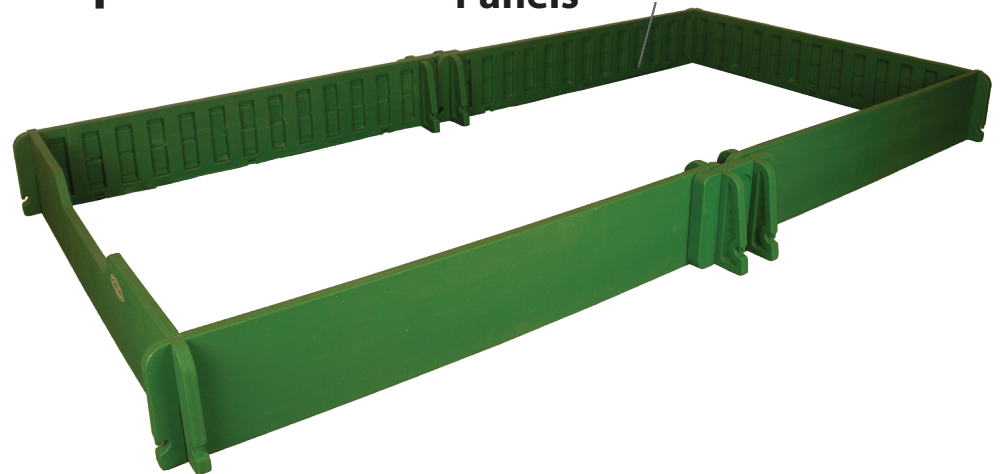


### Important!

Before setting stakes into panels it is important to pull the panels inward slightly so that the outward pressure from the sand will set the panel to a straight position.

When installing on solid surface see pg 9 for Solid surface installation.


### Your SandLock Sandbox kit includes:

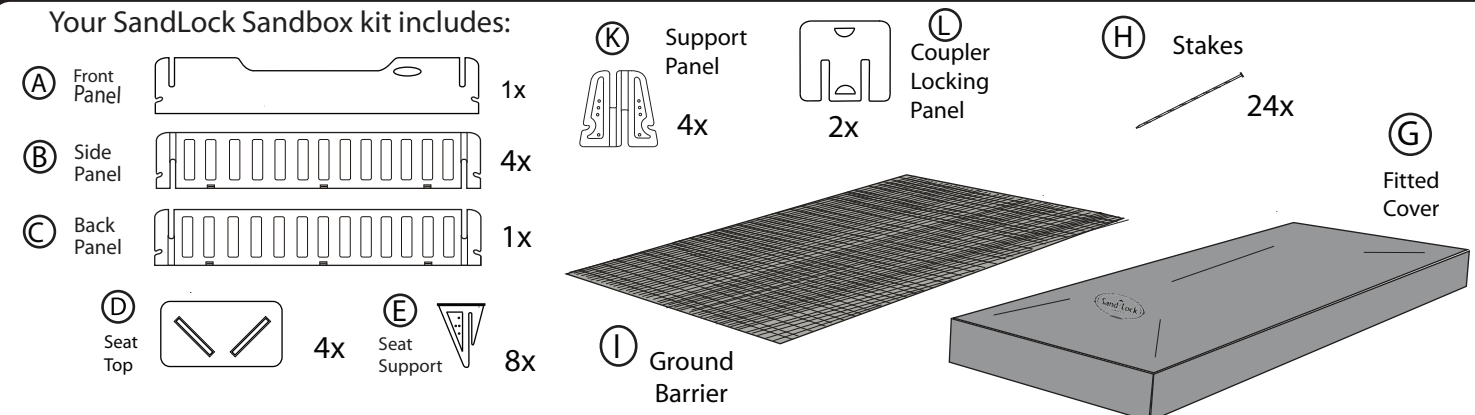

With sandbox frame complete, place liner into bottom of sandbox and unfold and adjust to the full interior of sandbox. Placing a small amount of sand on each corner of the liner to hold it in place and allowing you to pull the liner tight in all direction. Once the liner is stretched out completely the rest of sand can be placed and spread out evenly.

**To complete assembly refer to Pg 7 for seat assembly instructions**

## Step 3

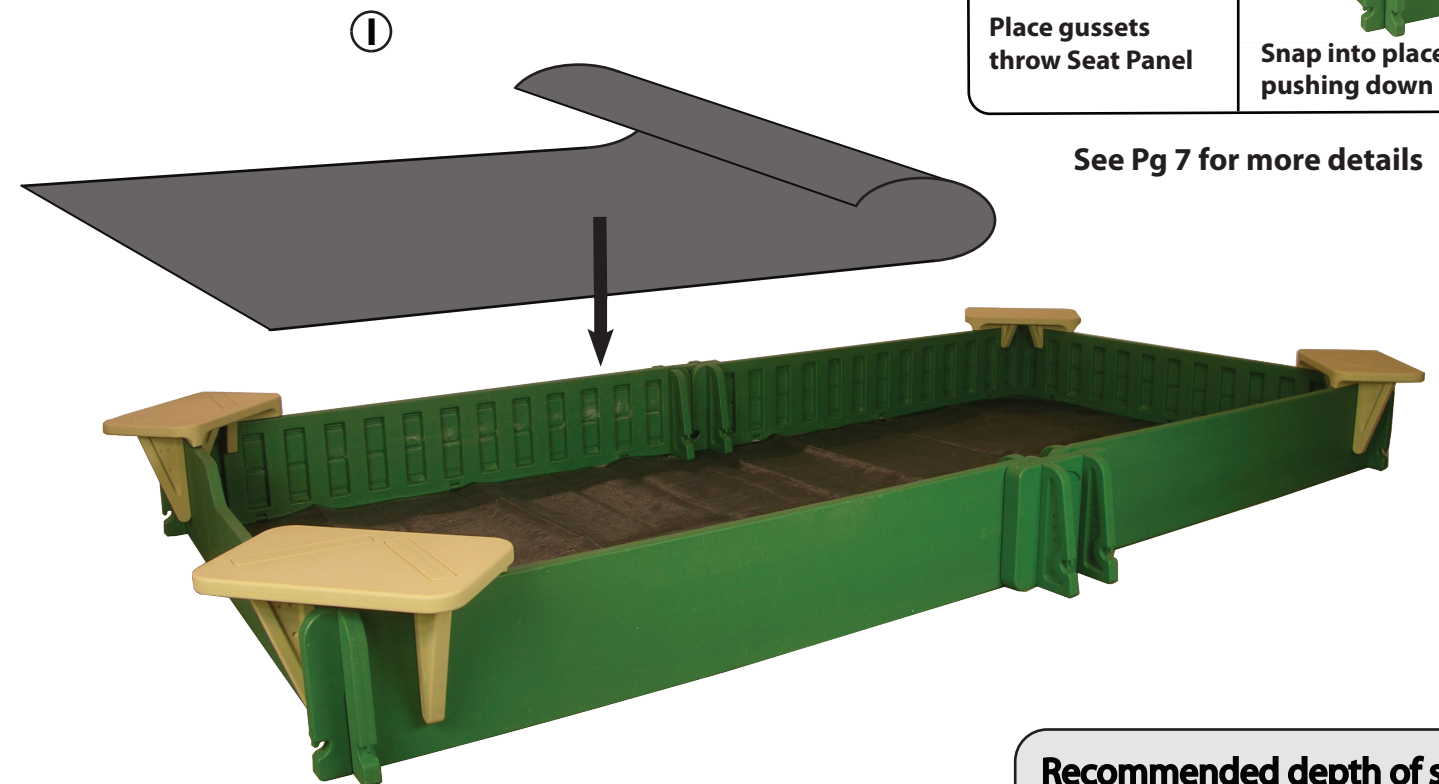

Place gussets throw Seat Panel

Snap into place by pushing down

See Pg 7 for more details

**Complete...  
Just add sand**

**Recommended depth of sand  
6"-7"  
Approximately: 1900lbs**